


HOW TO INSTALL GEN II HIE CYLINDER RASP BAR PACKAGE

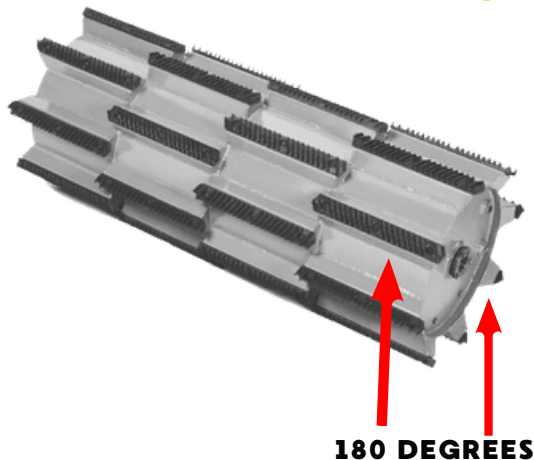

180 DEGREES

RIGHT HAND



LEFT HAND



WARNING: NOT MOUNTING BARS IN THIS MANNER MAY RESULT IN VIBRATION OR FAILURE DURING OPERATION

THE BACK SIDE OF EACH BAR IN THIS KIT IS MARKED WITH ITS CORRESPONDING WEIGHT. EACH BAR IS TO BE MATCHED WITH A BAR OF EQUIVALENT WEIGHT AND DIRECTION TO FORM A MATCHED PAIR. MATCHED PAIRS ARE TO BE INSTALLED ON OPPOSITE SIDES (180 DEGREES) OF THE CYLINDER/ROTOR.

GRADE 8 BOLTS ARE INCLUDED WITH EACH KIT TO BE USED WITH HIGH STRENGTH THREADLOCKER (RED) TORQUED TO 85 FT LBS.

NEED ASSISTANCE

780.789.3855
info@sunnybrookwelding.com